

## Determining Crossbar Length - 4 Easy Steps.

**Step 1:** Locate the desired position of Foundation Blocks

**Step 2:** Measure the distance between the handrails for the fore and aft crossbars ('A' and 'B').

**Step 3:** Note measurements A & B.

**Step 4:** See the chart below to determine crossbar lengths for your boat!




### CROSSBAR ADJUSTABILITY RANGE CHART

**Crossbar #1 Adjustability Range:** Min: 35.5 inches - Max: 55 inches

**Crossbar #2 Adjustability Range:** Min: 56 inches - Max 76 inches

**Crossbar #3 Adjustability Range:** Min 77 inches - Max 97 inches

**Crossbar #4 Adjustability Range:** Min 98 inches - Max 116 inches

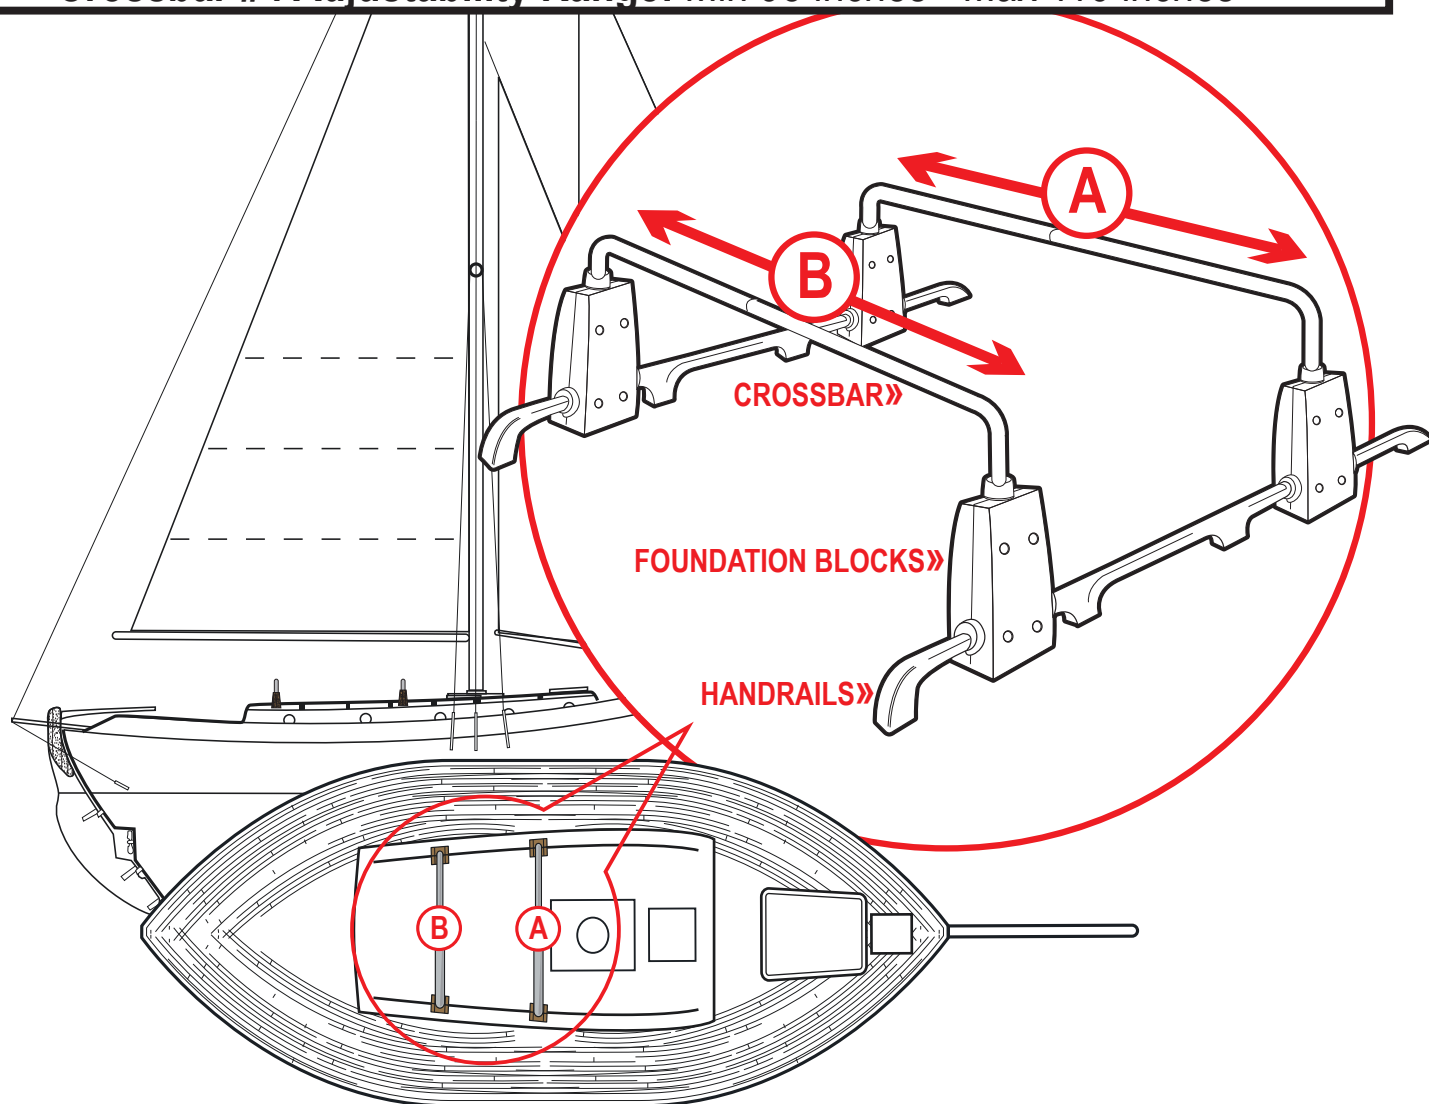

\*DRAWINGS NOT TO SCALE\*